

FAA APPROVED
AIRPLANE/ROTORCRAFT FLIGHT MANUAL SUPPLEMENT OR
SUPPLEMENTAL AIRPLANE FLIGHT MANUAL (INCLUDING POH AND FAA AFM)
(FOR THOSE AIRCRAFT WITHOUT A BASIC AIRPLANE FLIGHT MANUAL)

EGT-701 TEMPERATURE INDICATOR
FOR

Single and Twin Reciprocating Engine Powered Aircraft as listed
on Master Eligibility List of

STC SA2586NM.

REG. NO. _____

SER. NO. _____

This Supplement must be attached to the FAA Approved Airplane/Rotorcraft Flight Manual when the J.P. Instruments EGT-701 is installed in accordance with Supplemental Type Certificate SA 2586NM. For those airplanes without a basic Airplane Flight Manual, the Supplemental AFM must be in the aircraft when the EGT-701 is installed.

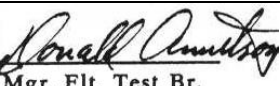
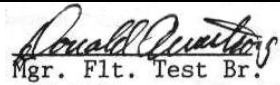

The information contained in this Airplane/Rotorcraft Flight Manual Supplement/ Supplemental Aircraft Flight Manual supplements or supersedes the basic manual/ placards only in those areas listed. For limitations, procedures and performance information not contained in this supplement, consult the basic Airplane Flight manual, Markings and Placards.

FAA APPROVED:



Manager, Flight Test Branch, ANM-160L
Federal Aviation Administration
Los Angeles Aircraft Certification Office
Transport Airplane Certification Directorate

Date: Nov. 12, 1992

Revision No.	Description	Affected Pages	Approval
Original	Complete Flight Manual Supplement for EGT-701	1 thru 4	 Mgr. Flt. Test Br. ANM-160L FAA, LA ACO Transport Airplane Directorate Date <u>11-12-92</u>
A	Added Fuel Flow features & Switch.	2 thru 4	 Mgr. Flt. Test Br. ANM-160L FAA, LA ACO Transport Airplane Directorate Date <u>12-13-96</u>
B	Added RPM and Manifold Pressure features	2 thru 4	 Mgr. Flt. Test Br. ANM-160L FAA, LA ACO Transport Airplane Directorate Date <u>6-17-99</u>

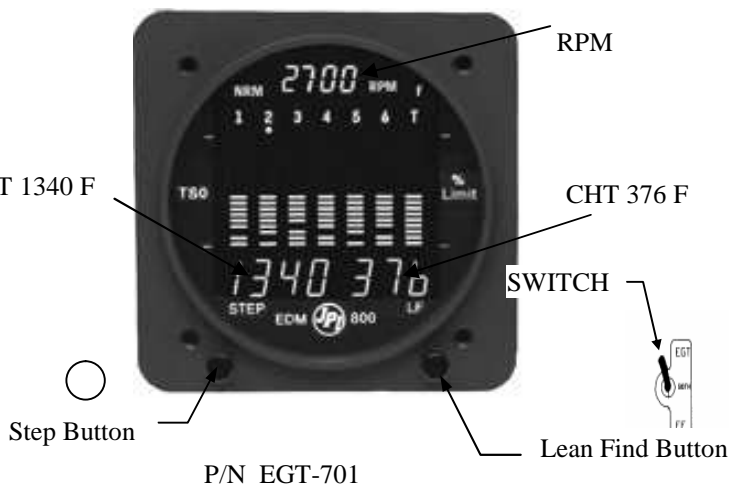
The EGT-701 temperature indicator displays temperature digitally and in analog format. The EGT as displayed is based on probes located near the exhaust outlet for each cylinder and the TIT probe, if installed, is adjacent to the turbo charger. These probes are not necessarily collocated with the primary probes therefore, EGT-701 may not indicate the same as the aircraft primary instruments. The analog display is an electronic bar graph (vertical columns, one per cylinder) of EGT & TIT temperatures presented as a percentage of 1650°F. Below the vertical columns the specific value for EGT and CHT are displayed digitally. The dot over the column indicates which cylinder's digital information is presently displayed. The missing bars at the base of the columns indicates the hottest and coldest Cylinder Head temperature trend. During Lean Find mode the leanest cylinder is displayed along with the fuel flow (optional) at that time. Depressing the LF and STEP button simultaneously brings up the adjustable scan rate function, OAT in °C or °F. Depress the LF button will change the value of the rate or OAT in °C or °F. Exit by Depressing STEP.

If the EGT-701 buttons are not depressed for 10 minutes the system will start scanning automatically. Depressing the STEP button will stop the automatic scan and index through all the functions available. During constant power cruise, if the LF button is depressed for five seconds the bargraph will level at mid scale. The leveled bars represent the peaks of each column. Each bar represents 10 °F and now acts as an EGT & TIT trend monitor, quickly showing an increase or decrease in temperature. Depress again to return to normal; nothing else is affected. With the fuel flow option there is a three position toggle switch. The positions are: 1) **EGT**, digital and bargraph display of temperatures, 2) **FF**, digital display of GPH, REM and USED Fuel. Temperature bargraph remains. 3) **Both**, cycles through everything installed. The data port output, sends RS232 serial data every 6-sec.

Options of Fuel Flow, TIT, OAT, IAT (induction air temp.), OIL, BAT (voltage) and are only displayed digitally with headlines after the number, as "230 OIL" or "14 GPH". A large value (50 +) of "CLD" indicates shock cooling usually associated with rapid descents at low power. Optional functions not installed will not display. RPM is displayed constantly in the upper display with no alarms. MAP is shown in the scan display.

Alarm limits set for this instrument if different from JPI limits.

- CHT _____
- OIL _____ EGT 1340 F
- TIT _____
- DIF _____
- CLD _____
- BAT _____
- TECH _____
- DATE _____



GENERAL (cont.)

An alarm causes the digital function to flash as soon as the particular limit is exceeded. Factory set alarm limits for CHT (450 °F) and OIL (230°F) are lower than the actual aircraft limits and can not be set by the pilot. The values may be adjusted to suit individual preference by a qualified technician. Other factory set alarm limits are: "BAT" Voltage 15.5/11.0 or 31.0/22.0 Hi/Lo as appropriate; "DIF" (differential Hi/Lo EGT) 500 °F, "TIT" 1650 °F Hi; "OIL" Lo 90 °F; "CLD" (Rate of change of cylinder head temperature in degrees per minute) -60 degrees/minute. The pilot should be aware of the setting of each alarm for his particular aircraft. An alarm is "Canceled" by holding the step button in for 5 seconds and seeing the word "OFF". Then, only that particular alarm is canceled. Canceled alarms will not appear again until the power has been removed and reapplied to the EGT-701. The entire display dims automatically depending on the ambient lighting.

The Cylinder Head with the Gasket probe and oil temperature will indicate generally higher temperatures than instruments provided by the aircraft manufacturer because the EGT-701 sensing thermocouples are not collocated with the primary instrument sensing probes. Therefore, airplane flight manual limitations based on primary instrument indication take precedence over those of the EGT-701

II OPERATING LIMITATIONS

- A. The EGT-701 may not replace any existing instrument or indicator required by the aircraft type design or operating limits.
- B. The EGT-701 display may not be used in lieu of, or to supersede, engine operating limitations established by the airframe or engine manufacturer during certification.

III. EMERGENCY PROCEDURES

No change

IV. NORMAL PROCEDURES

CAUTION

Comply with manufacturer's Airplane
Flight Manual leaning procedure.
Do not exceed applicable engine
or aircraft limitations.

After establishing desired cruise power depress the LF button to activate the Lean Find Mode. As the mixture is leaned, one column on the EGT-701 display will begin blinking, indicating the exhaust gas temperature for that cylinder has peaked showing its digital value along with the fuel flow (option) at that time. Continue with the leaning procedure as recommended by the aircraft manufacturer while monitoring the primary engine instruments and the EGT-701 display. Once the leaning procedure has been completed, depress the Step button briefly to exit the Lean Find Mode and enter the Monitor Mode.

FAA APPROVED 6/17/99